

TS-30-KS/短柄照光選擇開關



作動模式



Selector Head

2positions 0-I or I-II

switching angle 90°

do.but illuminated version

ON-OFF

ON-ON

2 段選擇



TS-30-KS-1R



TS-30-KS-1G



TS-30-KS-1Y



TS-30-KS-1W



TS-30-KS-1BL



TS-30-KS-2R



TS-30-KS-2G



TS-30-KS-2Y



TS-30-KS-2W



TS-30-KS-2BL

ON-OFF-ON

3 段選擇

Selector Head

3positions I-0-II or 0-I-II

switching angle 45° + 45°

do.but illuminated version

作動模式



作動模式



Selector Head(spring reset)

switching position on the left.

with spring reset to 0-position

from the right.I-0←II

switching angle 45° + 45°

do.but illuminated version

ON-OFF-ON

3 段單邊彈回



TS-30-KS-3R



TS-30-KS-3G



TS-30-KS-3Y



TS-30-KS-3W



TS-30-KS-3BL



TS-30-KS-4R



TS-30-KS-4G



TS-30-KS-4Y



TS-30-KS-4W



TS-30-KS-4BL

ON-OFF

ON-ON

2 段單邊彈回

Selector Head(spring reset)


with spring reset to 0-position

(on the left).0←I

switching angle 90°

do.but illuminated version

作動模式

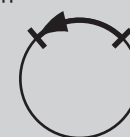

作動模式



Selector Head(spring reset)

with spring reset to the middle

position I→0←II

switching angle 45° + 45°

do.but illuminated version

ON-OFF-ON

3 段雙邊彈回



TS-30-KS-5R



TS-30-KS-5G



TS-30-KS-5Y



TS-30-KS-5W



TS-30-KS-5BL