

TS-30-KS/短柄選擇開關



作動模式



Selector Head
2positions 0-I or I-II
switching angle 90°
do.but illuminated version

ON-OFF
ON-ON
2 段選擇



TS-30-KS-1RR



TS-30-KS-1YY



TS-30-KS-1LBL



TS-30-KS-1GG



TS-30-KS-1WW



TS-30-KS-1BK



TS-30-KS-2RR



TS-30-KS-2YY



TS-30-KS-2LBL



TS-30-KS-2GG



TS-30-KS-2WW



TS-30-KS-2BK

ON-OFF-ON
3 段選擇

Selector Head

3positions I-0-II or 0-I-II
switching angle 45° + 45°
do.but illuminated version

作動模式



作動模式



Selector Head(spring reset)
switching position on the left.
with spring reset to 0-position
from the right.I-0-II
switching angle 45° + 45°
do.but illuminated version

ON-OFF-ON
3 段單邊彈回



TS-30-KSL-3RR



TS-30-KSL-3YY



TS-30-KSL-3LBL



TS-30-KSL-3GG



TS-30-KSL-3WW



TS-30-KSL-1BK



TS-30-KS-4RR



TS-30-KS-4YY



TS-30-KS-4LBL



TS-30-KS-4GG



TS-30-KS-4WW




TS-30-KS-2BK

ON-OFF
ON-ON
2 段單邊彈回

Selector Head(spring reset)
with spring reset to 0-position
(on the left).0-I
switching angle 90°
do.but illuminated version

作動模式

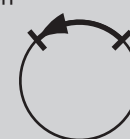

作動模式



Selector Head(spring reset)
with spring reset to the middle
position I-0-II
switching angle 45° + 45°
do.but illuminated version

ON-OFF-ON
3 段雙邊彈回



TS-30-KS-5RR



TS-30-KS-5YY



TS-30-KS-5LBL



TS-30-KS-5GG



TS-30-KS-5WW



TS-30-KS-1BK